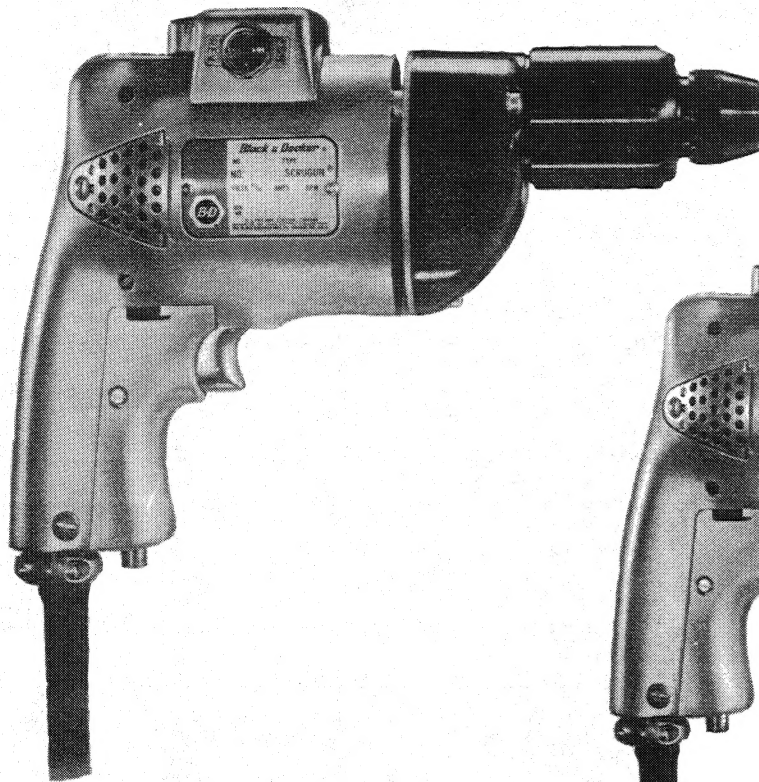 
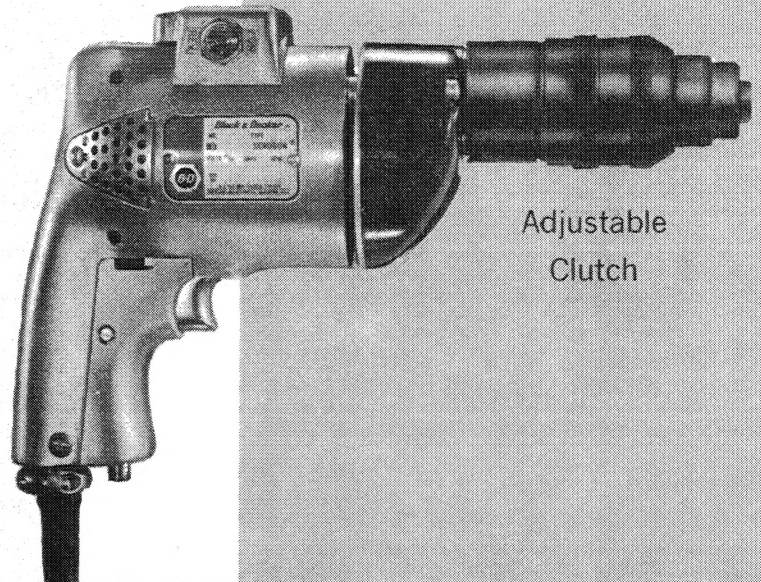 


Black & Decker[®]

POWER TOOLS



Positive Clutch



Adjustable
Clutch

OWNER'S MANUAL

**SAFETY
SEAL** 
power tool institute

This booklet is provided for your convenience in the use and care of your new Black & Decker tool. These instructions include operation, safety precautions, preventive maintenance, maintenance and other pertinent data to assist you in assuring long life and dependable service.

**No. 12
SCRUGUN[®]
SCREWDRIVER Cat. Nos.**
**350, 402, 2045-572,
2055-573, 2035-740-2**

SAFETY RULES FOR POWER TOOLS

1. **KNOW YOUR POWER TOOL**—Read owner's manual carefully. Learn its applications and limitations as well as the specific potential hazards peculiar to this tool.
2. **GROUND ALL TOOLS—UNLESS DOUBLE-INSULATED.** If tool is equipped with three-prong plug, it should be plugged into a three-hole electrical receptacle. If adapter is used to accommodate two-pronged receptacle, the adapter wire must be attached to a **known ground**. **Never** remove third prong.
3. **KEEP GUARDS IN PLACE** and in working order.
4. **KEEP WORK AREA CLEAN.** Cluttered areas and benches invite accidents.
5. **AVOID DANGEROUS ENVIRONMENT.** Don't use power tool in damp or wet locations. And keep work area well lit.
6. **KEEP CHILDREN AWAY.** All visitors should be kept safe distance from work area.
7. **STORE IDLE TOOLS.** When not in use, tools should be stored in dry, high or locked-up place—out of reach of children.
8. **DON'T FORCE TOOL.** It will do the job better and safer at the rate for which it was designed.
9. **USE RIGHT TOOL.** Don't force small tool or attachment to do the job of a heavy duty tool.
10. **WEAR PROPER APPAREL.** No loose clothing or jewelry to get caught in moving parts. Rubber gloves and footwear are recommended when working outdoors.
11. **USE SAFETY GLASSES** with most tools. Also face or dust mask if cutting operation is dusty.
12. **DON'T ABUSE CORD.** Never carry tool by cord or yank it to disconnect from receptacle. Keep cord from heat, oil and sharp edges.
13. **SECURE WORK.** Use clamps or a vise to hold work. It's safer than using your hand and it frees both hands to operate tool.
14. **DON'T OVERREACH.** Keep proper footing and balance at all times.
15. **MAINTAIN TOOLS WITH CARE.** Keep tools sharp at all times, and clean for best and safest performance. Follow instructions for lubricating and changing accessories.
16. **DISCONNECT TOOLS.** When not in use, before servicing; when changing accessories such as blades, bits, cutters, etc.
17. **REMOVE ADJUSTING KEYS AND WRENCHES.** Form habit of checking to see that keys and adjusting wrenches are removed from tool before turning it on.
18. **AVOID ACCIDENTAL STARTING:** Don't carry plugged-in tool with finger on switch.

SWITCHES

Pulling the Trigger Switch turns the tool "ON"; releasing the trigger turns the tool "OFF". To lock switch "ON", depress trigger, hold in locking button, and release trigger. Release button and tool will stay "ON". To then turn tool "OFF", depress and release trigger.

The reversing switch is mounted on the top of the tool and for driving fasteners is placed in the forward position. To reverse rotation for fastener removal, first release trigger to turn tool "OFF", then move toggle switch back to reverse tool.

For maximum tool life avoid excessive reverse operation. For those operations where the tool is used primarily in reverse, see your Black and Decker Distributor or Black and Decker Service Center.

MOTOR

Your Black and Decker tool is powered by a B&D built motor. Be sure your power supply agrees with nameplate marking. **Volts AC** means **Alternating Current** (25 to 60 cycles) **ONLY**. **VOLTS AC/DC** means it will also operate on **Direct Current**. Voltage variation of more than 10% will cause loss of power and over-heating. All B&D tools are factory-tested; if this tool does not operate, check the following: Supply line for blown fuses; plug and receptacle for contact; carbon brushes for contact.

COMMUTATOR AND BRUSHES

Inspect carbon brushes often. Replace when brushes are worn down to the identifying letter or groove or when spring exerts insufficient pressure to hold brush against commutator. Keep brushes clean and sliding freely in guides. Inspect commutator for dirt and excessive wear. If dirty or rough, clean **lightly** with very fine sandpaper (not emery cloth). If badly worn or grooved, send tool to our nearest service station for repair (see back page).

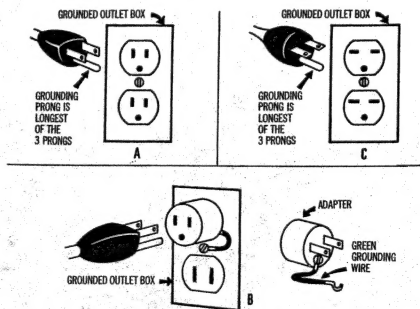 
GROUNDING

These units are equipped with approved 3-conductor cord and 3-prong grounding type attachment plug to be used with the proper grounding type receptacle, in accordance with the National Electrical Code and Canadian Electrical Code.

IF YOUR UNIT REQUIRES LESS THAN 150 VOLTS IT HAS A PLUG THAT LOOKS LIKE FIG. "A". It will fit directly into the proper type of 3-wire grounding receptacle. The unit is then grounded automatically each time it is plugged in.

Shown in Fig. "B" is a special grounding adaptor (not allowed in Canada by the Canadian Electrical Code) which is available from your dealer and will permit using a 2-wire receptacle. The green grounding wire extending from the side of the adaptor must be connected to a **PERMANENT GROUND**.

IF THE UNIT REQUIRES FROM 150 TO 250 VOLTS, IT HAS A PLUG LIKE FIGURE "C". No adapter is available and it should be used in the proper standard matching 3-wire grounding receptacle.



CABLE

The cable is the "life line" of your tool—keep it clean by wiping it off occasionally. Keep it out of oils and greases which ruin the rubber. Coil it neatly when not in use and avoid dragging it across sharp surfaces or using it as a handle to lift the tool. When using the tool at a considerable distance from power source, an extension cable of adequate size must be used to prevent loss of power and over-heating. Use the table below for 115-volt tools. For 220-volt tools, use wire size corresponding to an extension length of 1/2 the contemplated length.


Ampere rating (on nameplate)	0 to 2.0	2.1 to 3.4	3.5 to 5.0	5.1 to 7.0	7.1 to 12.0	12.1 to 16.0
Ext. Cable length	Wire Size (A.W.G.)					
25 ft.	18	18	18	18	16	14
50 ft.	18	18	18	18	14	12
75 ft.	18	18	16	14	12	10
100 ft.	18	16	14	12	10	—
150 ft.	16	14	12	12	—	—
200 ft.	16	14	12	10	—	—

OPERATION—CLUTCHES

In all Black and Decker Scruguns, a clutch provides a "dead" or stationary front spindle to permit the driving accessory to "locate" the screw slot or nut. Forward pressure then engages the clutch and drives the fastener.

No. 12 Scruguns are equipped with either a "Positive" or "Adjustable" clutch. Operation of these clutches is as follows:

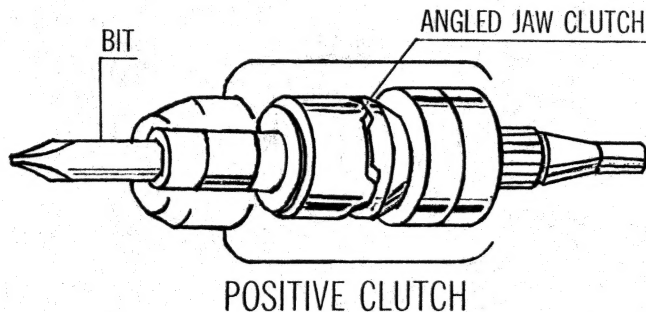 Positive Clutch—With the positive clutch, output torque of the screwdriver is directly controlled by operator pressure against the fastener. A heavy forward pressure will hold the clutch engaged to a high torque; while light forward pressure allows the clutch to disengage at a lower torque. Release of pressure completely disengages the clutch. Maximum torque on a fastener is reached by maintaining forward pressure on the tool and allowing the clutch to ratchet momentarily; the resultant hammering will further tighten the fastener.




Adjustable Clutch—The adjustable clutch mechanism allows the operator to drive a series of fasteners to a pre-set uniform torque. Torque output is controlled mechanically by a spring loaded clutch mechanism and operator pressure on the tool has no effect on output. The adjustable clutch mechanism is also provided with a dead spindle so that complete release of pressure on tool will disengage output spindle.

To adjust the clutch, slide the locking ring toward the gear case. This action unlocks the adjusting ring and allows it to be rotated. Turning the adjusting ring so that it moves toward the gear case will increase the output torque of the clutch.

An increase in the force required to turn the adjusting ring indicates that the clutch setting is increasing.

Turning the ring so that it moves away from the gear case will decrease the clutch setting. This is matched with a decrease in effort required to turn the adjusting ring. CAUTION: Once the adjusting ring is free from spring pressure additional loosening has no further effect on the clutch and should be avoided.

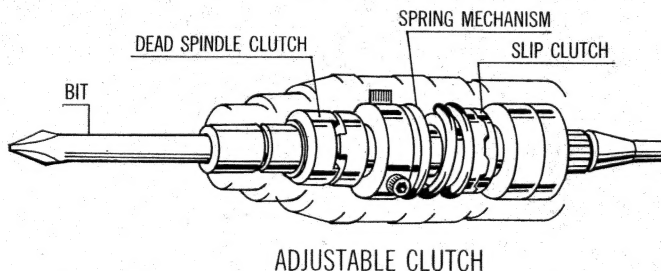 If the adjusting ring is loosened too far it will come off the tool allowing the locking ring and spring also to come off. No damage is done and these can be reassembled by operator.



LUBRICATION

Black and Decker Tools are completely lubricated at factory and are ready for use. Gears should be relubricated every 60 days to 6 months depending upon use. To lubricate, remove gear case, wipe out old grease, and refill gear case with B&D Heavy-Duty Grease to the amount specified on the Parts List packed with your tool.

It is also recommended that the clutch faces be given a light greasing after every 50 hours of usage. Refer to "exploded" parts bulletin (included with your tool) if you have any difficulty in making the minor disassembly necessary to reach the clutch.

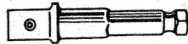
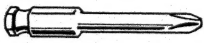
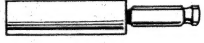
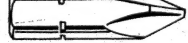
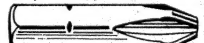
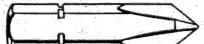
CLEANING

With the tool motor running, blow dirt and dust out of all air vents with dry air at least once a week. Also blow any dirt out of Switches, Quick-change Chuck or Screw Depth Locator. If your tool has a Locator, it should be disassembled after each day's work and all parts cleaned with kerosene or other cleaning solvent. Preferably, dry parts with an air hose with the motor running.


ACCESSORIES

Number 12 Scrugun Models can utilize practically every type of fastening accessory (bits, bit tip holders, shanks for sockets, etc.) with a 1/4" hex shank.

Your Tool will handle a wide variety of bits and other fastening accessories. Some of these are listed below, but for the very many other types and sizes of accessories please see your Black & Decker Distributor, or refer to Black & Decker Catalog No. 1.

<p>A. SQUARE DRIVE SHANKS —</p>  <p>1/4" HEX DRIVE SHANK</p> <p>No. 20510 2" Overall Length, For 1/4" Square Drive Sockets</p> <p>No. 20511 6" Overall Length, For 1/4" Square Drive Sockets</p>	
<p>B. PHILLIPS HEAD BITS —</p> <p>1/4" HEX DRIVE SHANKS</p>  <p>No. 54595 No. 1 Point, 1-15/16" Overall Length</p> <p>No. 54592 No. 2 Point, 1-15/16" Overall Length</p> <p>No. 54594 No. 3 Point, 1-15/16" Overall Length</p>	
<p>C. BIT TIP HOLDERS —</p> <p>1/4" HEX DRIVE SHANKS</p>  <p>No. 61108 Non-Magnetic, For 1/4" Bit Tips</p> <p>No. 63957 Magnetic, For 1/4" Bit Tips</p>	
1/4" HEX BIT TIPS	
<p>D.</p>  <p>No. 38403 Phillips, No. 1 Point</p> <p>No. 38404 Phillips, No. 2 Point</p> <p>No. 38405 Phillips, No. 3 Point</p>	
<p>E.</p>  <p>No. 61102 Phillips Pozedriv®, No. 2 Point</p> <p>No. 61104 Phillips Pozedriv®, No. 3 Point</p>	
<p>F.</p>  <p>No. 38406 Frearson Type (Reed & Prince)</p>	

 SOCKETS (Use with Square Drive Shanks)

G.			
	Cat. No.	Type	Hex Size Diam.
	20512	Non-Mag.	1/4" 1/2"
	20514	Non-Mag.	5/16" 1/2"
	20516	Non-Mag.	3/8" 9/16"
	38420	Magnetic	1/4" 7/16"
	38422	Magnetic	5/16" 1/2"
	38424	Magnetic	3/8" 9/16"

SLOTTED HEAD SCREWS are easily driven with "Bit and Finder" accessories. Finder Sleeve No. 65879 adapts the thread on the front of the clutch housing to hold all 719000 series Finders which then become integral with the housing.

If you prefer, separate Bits with Rotating Finders are available to mount directly in the Scrugun chuck. See your B&D Catalog No. 1 for the complete selection of accessories.

FACTORY SALES and SERVICE CENTERS

	Area Code	Telephone No.		Area Code	Telephone No.
ALABAMA: Birmingham 35233, 1717 Third Ave., South.....	205	324-6691	NEBRASKA: Omaha 68102, 2218 Leavenworth Street.....	402	345-2330
ARIZONA: Phoenix 85004, 537 E. McDowell Rd.....	602	AL 8-1332	NEW JERSEY: Newark 07104, 868 Broadway.....	201	HU 3-1076
ARKANSAS: Little Rock, 72201, 519 West Seventh Street.....	501	FR 2-3040	NEW MEXICO: Albuquerque 87110, 4700 Lomas Blvd. N.E.....	505	265-6401
CALIFORNIA: Anaheim 92802, 1235 So. Euclid Ave.....	714	772-4050	NEW YORK: Buffalo 14209, 881 W. Delavan Ave.....	716	TT 4-6220
Los Angeles 90007, 2432 S. Broadway.....	213	RI 9-0371	New York 10462, 1894 E. Tremont Avenue (Bronx).....	212	SY 2-2700
Oakland 94606, 1107 E. 14th St.....	415	TE 4-5944	New York 10014, 227 Varick St. (Manhattan).....	212	WA 9-6450
Sacramento 95814, 1915 Seventeenth Street.....	916	444-3188	New York 11377, 56-15 Queens Blvd. (Woodside).....	212	DE 5-1042
San Diego 92105, 3811 El Cajon Blvd.....	714	AT 1-3331	Rochester 14620, 476 Clinton Ave. S.....	716	454-3814
San Francisco 94080, 1139 Airport Blvd.....	415	871-7278	Syracuse 13224, 2140 Erie Blvd. E.....	315	446-3086
Santa Clara 95050, 2291 The Alameda.....	408	241-9162	NORTH CAROLINA: Charlotte 28206, 1710 N. Graham St.....	704	FR 5-3721
Van Nuys 91401, 14920 Victory Blvd.....	213	787-5531	Fayetteville 28306, P.O. Box 4305, Highway 301, S.....	919	425-1181
COLORADO: Denver 80204, 675 Kalamath St.....	303	222-0621	Greensboro 27403, 1008 W. Lee Street.....	919	275-0906
CONNECTICUT: Hartford 06114, 131 Meadow Street.....	203	249-6241	OHIO: Cincinnati 45203, 1225 Western Ave.....	513	421-2275
DISTRICT OF COLUMBIA: Washington			Cleveland 44113, 3901 Detroit Ave.....	216	OL 1-4243
Bladensburg, Maryland 20710, 4501 Baltimore Ave.....	301	779-3808	Columbus 43202, 3293 N. High Street.....	614	263-8884
Falls Church, Virginia 22046, 129 Annandale Road.....	703	533-1147	Dayton 45420, 617 Watervliet Street.....	513	252-1821
FLORIDA: Jacksonville 32208, 5224 Pearl Street.....	904	356-2951	Solon 44139, 6225 Cochran Road.....	216	CH 8-5330
Miami 33168, 13345 N. W. Seventh Avenue.....	305	681-6658	Toledo 43606, 2629 W. Central Ave.....	419	475-6771
Orlando 32806, 940 So. Orange Ave.....	305	423-1651	OKLAHOMA: Oklahoma City 73106, 1318 Linwood Blvd.....	405	CE 2-7515
Tampa 33609, 3401 W. Kennedy Blvd.....	813	872-8317	Tulsa 74145, 3120 South Sheridan Road.....	918	622-5666
GEORGIA: Atlanta 30313, 316 Techwood Drive, N.W.....	404	JA 4-0431	OREGON: Portland 97209, 1640 N. W. Johnson Street.....	503	CA 8-8631
HAWAII: Honolulu 96813, 675 Auahi Street.....	808	536-9374	PENNSYLVANIA: Harrisburg 17112, 6070 Allentown Blvd.....	717	KI 5-0651
ILLINOIS: Chicago 60607, 1100 W. Jackson Blvd.....	312	TA 9-3500	Lancaster 17604, 715 Fountain Ave.....	717	393-5831
Chicago 60646, Lincolnwood, 6710 N. Crawford Ave.....	312	OR 3-0923	Philadelphia 19103, 333 No. 20th Street.....	215	LO 4-5520
Chicago 60643, Beverly Hills, 10708 S. Western Ave.....	312	BE 3-6832	Pittsburgh 15232, 5437 Baum Blvd.....	412	362-2700
Rock Island 61201, 725 30th Street.....	309	788-1744	RHODE ISLAND: E. Providence 02914, 2777 Pawtucket Ave.....	401	434-1655
INDIANA: Evansville 47708, 931 Bond Street.....	812	425-4269	SOUTH CAROLINA: Greenville 29601, 407 Pendleton St.....	803	232-3038
Indianapolis 46202, 1125 W. 16th Street.....	317	632-5569	TENNESSEE: Knoxville 37917, 1123 North Central St.....	615	546-2481
IOWA: Des Moines 50312, 2811 Ingersoll Ave.....	515	CH 4-7257	Memphis 38116, 984-86 East Brooks Rd.....	901	332-3444
KANSAS: Wichita 67214, 203 N. Mathewson Street.....	316	FO 3-6571	Nashville 37203, 601 Eighth Ave. S.....	615	254-1061
KENTUCKY: Louisville 40209, 4407 Park Blvd.....	502	366-1495	TEXAS: Amarillo 79106, 3008 West 6th Ave.....	806	DR 3-1531
LOUISIANA: New Orleans 70002, 3310 N. Causeway Blvd.....	504	837-2550	Dallas 75207, 1808 N. Industrial Blvd.....	214	RI 1-6401
MARYLAND: Baltimore 21211, 203 West 28th Street.....	301	HO 7-7411	Fort Worth 76103, 1801 Bomar Street.....	817	ED 6-0175
Baltimore 21205, 4712 Erdman Ave.....	301	485-5550	Houston 77003, 105 Sampson Street.....	713	CA 8-7521
Bladensburg 20710, 4501 Baltimore Avenue.....	301	779-3808	San Antonio 78210, 1111 South Presa Street.....	512	LE 4-4611
MASSACHUSETTS: Boston 02135, 12 Market St. (Brighton).....	617	ST 2-6264	UTAH: Salt Lake City 84115, 1541 S. Second West Street.....	801	HU 6-7056
MICHIGAN: Detroit 48219, 18133 W. McNichols Rd.....	313	534-8880	VIRGINIA: Falls Church 22046, 129 Annandale Road.....	703	533-1147
Detroit 48234, 11360 East Seven Mile Road.....	313	527-5010	Norfolk 23517, 337 W. 21st Street.....	703	627-6888
Grand Rapids 49509, 3662 Clyde Park Ave., S.W.....	616	534-7708	Richmond 23222, 1424 Chamberlayne Ave.....	703	649-9245
MINNESOTA: Minneapolis 55408, 2815 Nicollet Ave.....	612	TA 3-5283	WASHINGTON: Seattle 98119, 701 Third, North.....	206	AT 2-6432
MISSOURI: Kansas City 64108, 2705 McGee Trafficway.....	816	HA 1-1493	Spokane 99207, 3550 North Market Street.....	509	HU 9-9164
St. Louis 63110, 615 S. Vandeventer Ave.....	314	JE 3-2210	WEST VIRGINIA: Charleston 25312, 1638 Sixth Ave.....	304	343-0289
			WISCONSIN: Milwaukee 53213, 6301 Blue Mound Road.....	414	GR 6-7800

BLACK & DECKER MFG. CO., Limited, Canada

BROCKVILLE, ONTARIO.....	Perth Street	MONTREAL 10, P. Q.....	7865 St. Lawrence Blvd.
CALGARY, ALBERTA.....	1003 11th Avenue, S. W.	OTTAWA, ONTARIO.....	418 Laurier Avenue, West
DON MILLS (Toronto).....	2 Valleybrook Drive	QUEBEC CITY, P. Q.....	330 St. Roch Street
EDMONTON, ALBERTA.....	11440 Ave.—142 Street	REGINA, SASKATCHEWAN.....	1076 Albert Street
HALIFAX, NOVA SCOTIA.....	803 McLean Street	SASKATOON, SASK.....	Diamond Ind. Center, Quebec & 33rd St.
HAMILTON, ONTARIO.....	180 Parkdale Ave., N.	VANCOUVER 10, B. C.....	24 West 2nd Ave.
LONDON, ONTARIO.....	631 Commissioners Rd., East	WINNIPEG 10, MANITOBA.....	934 St. James St.

AUTHORIZED SERVICE STATIONS

ALABAMA, Montgomery	CONNECTICUT, New Haven	MAINE, Westbrook	OHIO, Youngstown	TEXAS, Corpus Christi
ALASKA, Anchorage	DELAWARE, Wilmington	MISSISSIPPI, Jackson	PENNSYLVANIA, Allentown	El Paso
Fairbanks	FLORIDA, Pensacola	NEVADA, Reno, Las Vegas	Erie	VIRGINIA, Roanoke
ARIZONA, Tucson	IDAHO, Boise, Lewiston	NEW YORK, Schenectady	SOUTH CAROLINA, Charleston	WASHINGTON, Yakima
CALIFORNIA, Fresno			SOUTH DAKOTA, Rapid City	WEST VIRGINIA, Wheeling
Stockton				

DISTRIBUTION CENTERS

CALIFORNIA 94804, Richmond, 1732 Wright Ave. Phone: 415 235-4232	
CONNECTICUT 06051, New Britain, 595 John Downey Drive, Phone: 203 225-8415	
GEORGIA 30354, Atlanta, 3271 Hamilton Blvd. S.W. Phone: 404 762-1601 - 4	
ILLINOIS 60018, Des Plaines, 2180 S. Wolf Road Phone: 312 827-7145 (Sales Office: 312 827-0083)	
MARYLAND 21074, Hampstead, Phone: 301-374-9046	
MISSOURI 64116, N. Kansas City, 1343 Murray Drive Phone: 816 842-6350	

MANUFACTURING PLANTS

Fayetteville, North Carolina;	
Lancaster, Pa.; Solon, Ohio;	
Towson, Md., Hampstead, Md., U. S. A.;	
Brockville, Ontario, Can.; Harmondsworth	
Middx., Maidenhead, Spennymoor, England;	
Croydon, Vic., Australia; Lyon, France; Milan, Italy	

SALES AND SERVICE SUBSIDIARIES

Vienna, Austria; Brussels, Belgium; Copenhagen, Denmark;	
Helsinki, Finland; Idstein, Germany; Athens, Greece; Tokyo,	
Japan; Mexico, D.F., Monterrey, Guadalajara, Mexico; Rotterdam,	
Netherlands; Auckland, Wellington, Christchurch, New Zealand; Grouard,	
Norway; Johannesburg, Cape Town, Durban, South Africa; Barcelona,	
Spain; Goteborg, Sweden; Zurich, Switzerland; Caracas, Venezuela	

BLACK & DECKER, INC., Urbanizacion Industrial Julia
Caparra Heights, San Juan, Puerto-Rico

Guarantee

BLACK & DECKER GUARANTEES, FOR ONE YEAR FROM DATE OF PURCHASE, TO CORRECT BY REPAIR OR PARTS REPLACEMENT WITHOUT CHARGE ANY DEFECT DUE TO FAULTY MATERIAL OR WORKMANSHIP. SIMPLY RETURN THE COMPLETE UNIT, TRANSPORTATION PREPAID, TO ANY BLACK & DECKER SERVICE CENTER OR AUTHORIZED SERVICE STATION. NATURALLY, WE ASSUME NO RESPONSIBILITY FOR DAMAGE CAUSED BY MISUSE, CARELESS HANDLING OR WHERE REPAIRS HAVE BEEN MADE OR ATTEMPTED BY OTHERS. NO OTHER GUARANTEE, WRITTEN OR VERBAL, IS AUTHORIZED BY US.

THE BLACK AND DECKER MFG. CO. — TOWSON, MARYLAND 21204, U.S.A.